

Rejuvenate[®]

Make It **NEW** Again!

FABRIC RENEWER Pill & Fuzz Shaver



**INSTRUCTION MANUAL AND WARRANTY INFORMATION
READ AND SAVE THESE INSTRUCTIONS.**

CONTENTS

Safety Instructions	Page 1
Parts	Page 2
Operating Instructions	Page 3
Battery Use / Cleaning & Storage.....	Page 4
Warranty.....	Page 5

SPECIFICATIONS

Product Model	Adapter Power Source	Input Voltage	Battery Type	Net Weight
GI-8818	110-120V~60Hz	6VDC, 5W	C type (x4)	1LB or 455G

SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should always be taken including the following:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy; close attention is necessary when used by children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- This device is equipped with a sharp cutting blade. To prevent bodily injury, do not use the device to shave hair or skin.
- Do not let the unit run while in any one stationary position for any period of time. Keep the unit moving while in operation.
- Do not allow water or other liquid to enter the inner part of the device.
- Do not drop or insert any objects into the shaver screen.
- Do not use with a damaged adapter or cord.

Additional Safeguards

- Always disconnect cord from electrical outlet before servicing the fabric shaver.
- Remove batteries from compartments if the device is not being used for a prolonged period of time. This will prevent possible damage caused by leaking batteries.

PARTS




OPERATING INSTRUCTIONS

Congratulations on your purchase of the Rejuvenate® Fabric Renewer Pill & Fuzz Shaver—the easiest way to remove fuzz balls, pills, lint, and pet hair. The triple action blades remove tough pills with ease! Please read all instructions and warnings in this manual prior to using your Fabric Shaver.

Using the Fabric Shaver

- Plug the A/C Power Adapter into the Adapter Input **A** or use the fabric shaver with batteries (see battery use on page 4).
- Turn the fabric shaver on by using the one touch sliding ON/OFF switch **B**

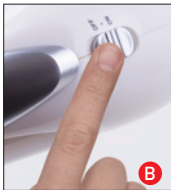

Place fabric you wish to renew on a flat surface. Holding the device by its handle, gently glide it over the fabric. Pull the fabric as straight as possible to increase the efficiency and results of the device.

Useful Tips:

- Tuck in exposed threads before shaving to prevent damage.
- Test the fabric shaver on a hidden or inconspicuous area before using it on the entire fabric surface.
- Do not press the device too hard against the fabric as it may cause damage.
- After each use, or when Storage Box is half full, pull out the Storage Box and dispose of the fabric shavings inside.
- If efficiency of the device becomes low, open the Screen Cover by unscrewing it counter-clockwise. Carefully take out the cutting blade, then clean the blade and inner compartment with the soft brush included. Replace Screen Cover.




⚠Warning: Unplug the shaver prior to opening the Screen Cover; blades are sharp so please use caution.

- The device is equipped with a safety switch that will disable operation when the Screen Cover is loose or opened.

BATTERY USE

To insert batteries for battery use, grab both sides of the Storage Box at the bottom of the unit and slide out. Open the cover of the battery compartment upward. Using four (4) “C” size batteries (not included), install according to positive “+” and negative “-” signs on the battery cover, and then place the cover back and snap shut. Slide the Storage Box back into place.

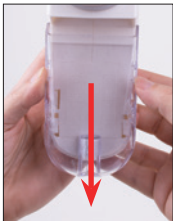

Battery Disposal:

DO NOT dispose of batteries in fire. Improper handling/disposal of batteries may cause batteries to explode or leak. Please dispose of batteries responsibly by throwing away batteries in a proper trash receptacle per township ordinance

CLEANING & STORAGE

- Never let the Storage Box become overly full; empty frequently.
- To clean the shaving head or blades, unplug the shaver. Unscrew the Screen Cover and use the cleaning brush provided to remove any lint. Then screw the Screen Cover back on. **⚠Warning: Blades are sharp so please use caution.**
- Clean body with a damp cloth. Do not allow water or any liquid to enter the inner parts of your fabric shaver.
- Store in a dry location away from children.



WARRANTY

Thank you for purchasing the Rejuvenate® Fabric Renewer Pill & Fuzz Shaver. This product comes with a 1-year manufacturer's warranty. If this unit should become defective within 1-year from the date of purchase, or if you have any questions or comments or regarding replacements for any of our products, please contact us directly at:



Call us toll free at: 866-817-7788 - Monday thru Friday 8:30 AM to 5:00 PM EST.

Visit us on the Web at: www.GreatInnovations.tv

E-mail us: info@greatinnovations.tv

Or Write us:

Great Innovations, LLC
Att: Quality Assurance Dept.
2301 SW 145th Ave.
Miramar, FL. USA 33027

Please fill out the warranty card and mail back to the above address.

Or, register your warranty online today!

Simply go to: <http://www.greatinnovations.tv/warranty.php>

MODEL: Rejuvenate® Fabric Renewer Pill & Fuzz Shaver GI-8818

NAME _____

ADDRESS _____

CITY _____

STATE _____ ZIP _____

TELEPHONE _____

E-MAIL _____

DATE OF PURCHASE _____

PLACE OF PURCHASE _____

Please check here if you would not like to receive any solicitations from our company

THIS UNIT COMES WITH A ONE YEAR WARRANTY SUBJECT TO THE FOLLOWING CONDITIONS:

In the first year, all repairs will be performed free of charge or the unit will be replaced. This warranty is not transferable, it is valid only for the original purchaser. This warranty will be voided if the unit is subjected to unauthorized repair or impact damage. If you have any questions please call toll free: 866-817-7788. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



© Great Innovations, LLC 2019. All Rights Reserved. Printed in China.